HIGH-GLOSS PORCELAIN AND GLASS PAINT MARKER

Turn glass and porcelain objects into personalised decorations by adding your ownindividual touch. A range of different tip sizes allows pinpoint design accuracy. Use your imagination to bring ideas to life and create a unique setting in your living room or dining area.



PRE-CLEANING

PORCELAIN & GLAS

Before painting, your porcelain or glass must be free from any grease. The best way to clean it is with a small sponge and hand-wash/cream cleanser, then rub off any finger prints with Marabu Cleaner or white spirit. Do not use a dishwasher for pre-cleaning.

ACTIVATING THE PORCELAIN & GLAS PAINTER

- Before first use, shake the paint marker vigorously with the cap on for 60 seconds.
- Gently press the tip onto a piece of scrap paper several times until the ink becomes visible. Make sure to wait in between. Once the flow of ink has been activated, the tip will slowly start to absorb paint until it is full. The length of time required for pumping depends on the type of tip.
- Test the marker on a neutral and absorbent surface.
- The paint applied will remain full and even if you pump the marker occasionally during use.
- Close the marker with the cap firmly after use, even when changing colours.
- Store the marker horizontally and briefly shake and re-pump before the next application.



DRYING AND HEAT SETTING

Leave to dry for 4 hours, then fire in the oven for 30 minutes at 160°C (do not preheat). Leave to cool down in the oven. Painted tableware should be washed at max. 50°C on a glasses/cups cycle.





DO NOT PAINT CUTTING SURFACES OR GLASS RIMS

Cutlery can rub off or damage the design. Marabu porcelain and glass paints are intended for decorative purposes only and should not come into direct contact with any food items. We therefore recommend that when creating your tableware designs, you do not paint on cutting areas, inner surfaces or glass rims.



Providing the paint is not completely dry, it is still possible to correct any mistakes or to completely remove the paint with either a cloth or a cotton bud and Marabu Cleaner or white spirit.

CLEANING THE TIP

If the tip is stained or dried out, simply remove it from the shaft of the marker, clean with water and dry thoroughly. You may need to remove any ink remnants from the shaft before replacing the tip. Afterwards, reactivate the flow of ink to the tip.



PORCELAIN & GLAS PAINTER







Marabu GmbH & Co.KG Fritz-Lieken-Straße 7-9 74321 Bietigheim-Bissingen Tel. + 49 7141 691 0 www.marabu.com/creative





QUALITY

- Pump system with highly pigmented ink.
- Colour range comprises 17 basic and trend colours, 9 metallic and 7 glitter paints that can be used in combination with Marabu Porcelain and Glas.
- More transparent on glass than on porcelain. Choose the right tip and apply a thicker/thinner layer to achieve the desired coverage.
- Dishwasher-safe after firing.
- Suitable for porcelain, glass, metal, mirrors, ceramic, terracotta and stone.



PORCELAIN AND GLAS PAINTER TIP SIZES

Create unique works of art by combining all four tips:

METAL-ENCLOSED MULTI-PURPOSE PLASTIC TIP 0,8 MM: for clean outlines and lettering.

MULTI-PURPOSE TIP 1-2 MM: Can be used for a range of painting and writing activities.

MULTI-PURPOSE TIP 2-4 MM: C

CALLIGRAPHY TIP 1-2.5 MM:

ornately write names, messages and signatures.

	□ -(mm 0	8 (1-2,5		mm	_	⊂ ∎ 1-2	⊂ 2-4	□ 1-2,:
	•	•	•	•			•	•	•	
20 sunshine yellow					142 gentian					
	•	•		•			•	•	•	•
25 tangerine					293 night blu	e				
	•	•		•			•	•	•	•
25 cherry					092 petrol					
34 bordeaux	•	•			A/1 - 1		•	•	•	•
134 bordeaux					061 reseda					
	•	•		•	150		•	•	•	•
)33 rose pink					158 apple					
005 raspberry	•	•		•	153 mint		•	•	•	•
,										
251 violet	•				295 cocoa		•	•		
41 sky-blue					070 white		•	•	•	•
										•
					073 black		•	•	5	•

